



LMI (Load Moment Indicator)

PROVIDED PARAMETERS:-

Actual load

Over load alarm

Easy to calibrate

**Relay Cut Off (NO/NC,
Common)**

**Unsafe condition (Visual,
Audible, Physical Cut off)**

**We can set overload
anywhere (By
User) Overload alert
(Visual, Audible, Physical
Cut off)**